



INSTRUCTIONS FOR USE OF YARWAY SEATLESS VALVE GLAND & PACKING PULLER

1. Remove yoke and plunger from valve.
2. Remove stop screw which locks lower gland into valve body.
3. Select suitable size Head Assembly, that is, for 1-1/4", 1-1/2", 2" or 2-1/2" size valve as required.
 Note: The head assembly will fit YARWAY Types A, B and C Valves.
4. Assemble the puller as shown above, adjust jack screw to permit head assembly to enter valve the correct depth, that is, until pawls engage port holes of lower gland.

CAUTION: Do not lower head assembly excessively; make sure pawls do not enter valve body below lower packing ring.

5. Tighten the 1-1/4" hex nut on top of bridge and draw lower gland, upper packing, and upper gland from valve. Use force if necessary.
6. When the loosened parts are removed, then take out lower packing ring with a packing hook or suitable tool being careful not to damage body groove into which packing fits.

Do not try to use puller to remove lower packing ring.

SEE ASSEMBLY DRAWING BO-40718 FOR CORRECT POSITION OF PULLER TO VALVE.

PRODUCTION
 JUN 3 1982

4" SIZE ADDED
 6-20-57 PER
 ALTERATIONS

**YARWAY SEATLESS BLOW-OFF VALVE
 GLAND & PACKING PULLER
 INSTRUCTIONS**
 YARNALL - WARING CO.
 PHILADELPHIA, PA.

DRAWN *W.B.* SCALE **NONE**
 CHECKED *JTC* DATE **11-2-54**

BO-915-665